

Quick guidelines for operation with addressable fire panel IRIS

FIRE Event in the System

FIRE ALARM Indication

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

Activated Sounders

FIRE alarm in the zone

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

1 Turn off the buzzer:

FIRE in premises
Panel:01, Loop: 1
001 Sun | 29.Oct.2006 | 23:59:32

Go to the zone with fire alarm event and check for a real presence of FIRE

2 If NO FIRE in the premises - turn off the sounders:

Enter code for ACCESS LEVEL 2 or 3

3 If THERE IS FIRE in the premises and "Delay override" is programmed for the sounders - activate the outputs (sounders, control and signalling devices, etc):

4 Clear all alarm messages (access level 2 or 3):

5 The panel is in normal operation mode:

FAULT Event in the System

FAULT Event Indication

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

Activated Sounders

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

1 Turn off the buzzer:

Short circuit
Panel:01, Loop: 1
001 Sun | 29.Oct.2006 | 23:59:32

Check the type of FAULT!

WARNING Message event in the System

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

Activated Sounders

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

1 Turn off the buzzer:

Low battery:
Panel:01, Periphery Device
001 Sun | 29.Oct.2006 | 23:59:32

Check the type of WARNING!

2 Call the MAINTENANCE SERVICE and report for the type of FAULT or WARNING event:

Tel.:.....

Mobile:.....

Responsible person:.....